

## 1.0 Out-of-Box and Prior to Final Installation

- 1.1. Verify that you have received all of the parts listed on the *Installation Quick Reference* placemat.
- 1.2. Download the current manual, otherwise known as an *Operation Guide*, which is available on the **Documentation** page at the following website address:

<http://www.cyberdata.net/products/voip/digitalanalog/ceilingspkr2/docs.html>

**Note** You can also navigate to the **Documentation** page by going to [www.CyberData.net](http://www.CyberData.net) and following the steps that are indicated by the following figures:

**1** Products ▾ Solutions ▾ Support ▾ Partn  
Cables  
Point-of-Sale  
VoIP  
OEM  
Product Registration  
SIP IP to Analog Endpoints  
SIP Paging Endpoints  
SIP Intercom Endpoints  
SIP Notification Endpoints  
Singlewire-enabled Endpoints  
Syn-Apps enabled Endpoints  
OEM Endpoints  
Accessories  
Coming Soon!  
VoIP Datasheets and Pricing  
End-of-Life Endpoints

**2** **Ceiling Speaker V2.0**  
The CyberData SIP-enabled network-controlled speaker. Includes the CyberData Clock kit.  
[Go to product page](#)


**3** **Documentation**

## 2.0 Select Power Source

PoE Switch	PoE Injector
Set PoE power type to Class 0 = 15.4W	CAT6 cable recommended— for longer distances
	Be sure you are using a non-PoE switch or port
Make sure port is not in trunk mode	
Set port to full duplex/ 100mbps	
Spanning Tree Protocol (STP) must be disabled or Portfast enabled	

## 3.0 Power Test

- 3.1. Plug in the CyberData device and monitor the LED activity on the front of the device. See the following figure:

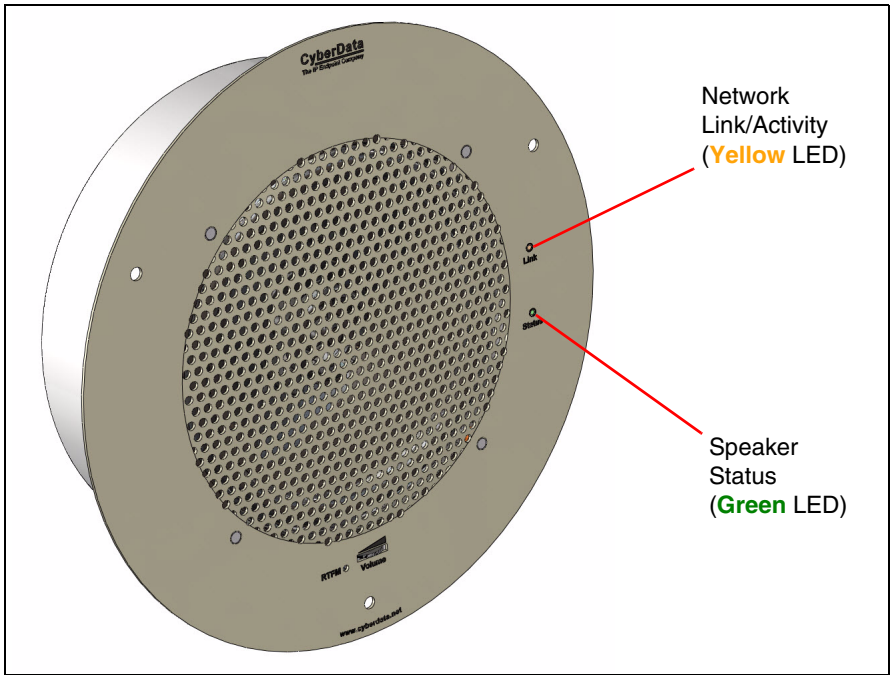

- 3.2. The **GREEN** power/status LED and the **YELLOW** network LED come on immediately. The **YELLOW** network LED will blink to indicate network traffic. After about 27 seconds, the **GREEN** power/status LED will blink twice to indicate that the board is fully booted.

If there is no DHCP server available on the network, it will try 12 times with a three second delay between tries and eventually fall back to the programmed static IP address (by default 10.10.10.10). This process will take approximately 80 seconds.

- 3.3. When the device has completed the initialization process, press and hold the RTFM switch for 3 seconds to announce the IP address.

This concludes the power test. Go to [Section 4.0, "Connecting to a Network in a Test Environment"](#).

---

## 4.0 Connecting to a Network in a Test Environment

**Note** The following connections are usually needed for this procedure:

- Computer
- PoE switch or injector
- CyberData device

4.1. In a test environment, use a computer that is connected to the same switch as a single CyberData device. Note the subnet of the test computer.

4.2. Use the CyberData Discovery Utility program to locate the device on the network. You can download the Discovery Utility program from the following website address:

<http://www.cyberdata.net/support/voip/discovery.html>

4.3. Wait for initialization to complete before using the Discovery Utility program to scan for a device. The device will show the current IP address, MAC address, and serial number.

4.4. Select the device.

4.5. Click **Launch Browser**. If the IP address is in a reachable subnet from the computer that you are using to access the device, the Discovery Utility program should be able to launch a browser window pointing to the device's IP address.

4.6. Log on to the web interface by using the default username (**admin**) and password (**admin**) to configure the device.

4.7. Perform an audio test by pressing the **Test Audio** button that is located at the bottom of the **Device Configuration** page. If the audio test message is clearly audible, then your CyberData device is functioning properly.

4.8. The device is now ready to be set for your desired network configuration. You may search the **Compatible IP-PBX Servers** index for available sample VoIP phone system configurations and set up guides at the following website address:

<http://www.cyberdata.net/support/server/index.html>

---

## 5.0 Contacting CyberData VoIP Technical Support

Please visit our website and complete the **Contact VoIP Tech Support** form available at the following website address:

<http://www.cyberdata.net/support/contactsupportvoip.php>

**Note** You can also navigate through menus to the Support form by going to [www.CyberData.net](http://www.CyberData.net) as shown in the following figure:



The **Contact VoIP Tech Support** form initiates a ticket which CyberData uses for tracking. Most importantly, the **Contact VoIP Tech Support** form tells us which PBX system and software version that you are using, the make and model of the switch, and other essential troubleshooting information. Please also include as much detail as possible in the **Describe Problem** section of the **Support** form.

Requests for Returned Materials Authorization (RMA) numbers require an active VoIP Technical Support ticket number. A product will not be accepted for return without an approved RMA number.

More information about warranty and RMA returns is available at the following website address:

<http://www.cyberdata.net/support/warranty/index.html>